

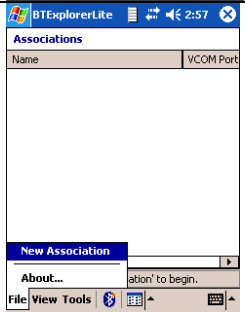
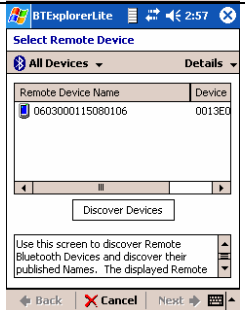
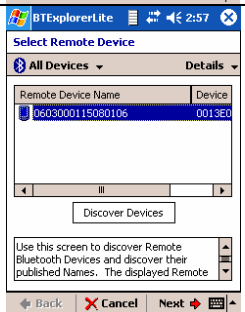
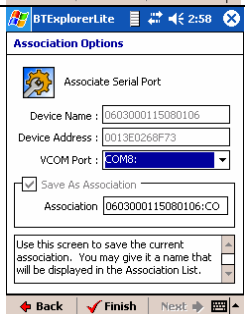


Associating LDAR Solution's WDA with Motorola/Symbol's Blue Tooth Explorer Lite Application.

<p>1. Click  on the bottom right hand corner. Select "Show BTE Explorer Lite".</p>	
<p>2. Click File New Association</p>	
<p>3. The WDA should show up on the "Remote Device Name" list</p>	
<p>4. Select the WDA and then click Next</p>	
<p>5. Select the "VCOM Port". Recommended com ports are either 6 or 8. Click "Finish"</p>	

6. Click the “x” on the top right corner to exit BTEplorerLite.

